


Karaoke Party



1


Turn on the laptop

Give it approx. 1 -2 min time until it is completely booted, you have just woken it up from sleep....

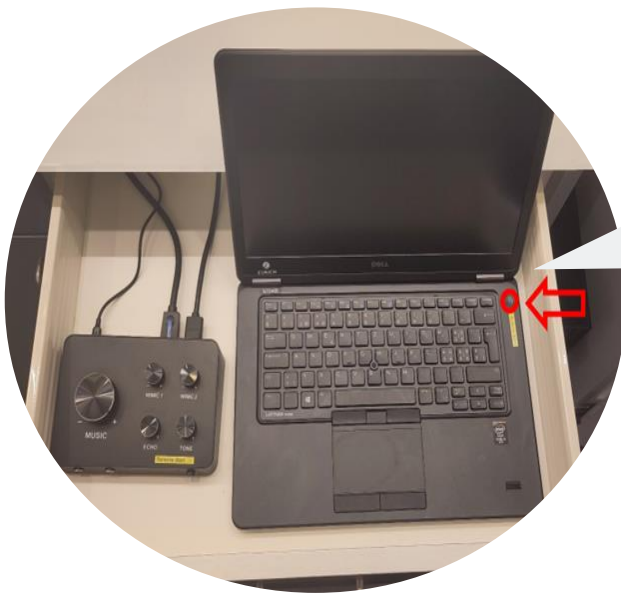

2

Switch on the karaoke device: press the power button.

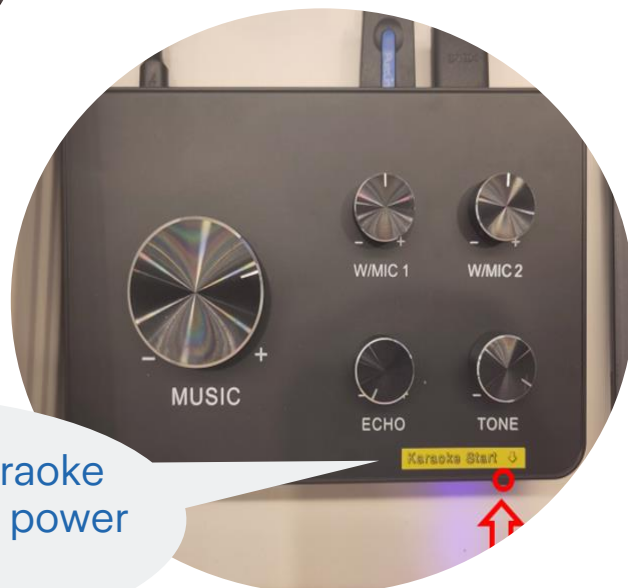



3

Check if the controllers are set approximately like . It's a good starting position.

Switch on microphones: Press the power button for about 5 seconds.

4



5

Turn on the TV: Press the red power button on the TV remote control. Switch to HDMI 1 with the source button on the remote control.

Karaoke Software

If the program stalls at the beginning, give it some time, the system is probably still booting up.



Karaoke Device



Volume of the
microphones

Volume of the song.

Trouble Shooting

If the microphones have poor reception:

- The microphones have the best reception the closer they are to the karaoke device.
- Even if you hold the microphone "loosely" and not with your whole hand, you can improve the reception.
- Depending on the situation, it also helps to change the channel. To do this, press the "set button" on the microphone for about 5 seconds.

Recommended channels are:

- For the red microphone: CH01
- For the blue microphone: CH04

If your laptop has problems or the karaoke software is not displayed anymore:

- You can either switch the laptop off and on again with the power button.
- You can click on the laptop "Windows key + D".

Karaoke stop:

- Switch off the laptop with the power button
- Turn off the karaoke machine (same as turn on)
- Microphones check; If these show "low battery" please inform our team.
- Switch off microphones, press power button for about 5 seconds.
- Switch off TV